

# Instruction of Print Head Disassembly

Step 1. Remove 2 screws.



Step 2. Remove connector to take the print head out.



